

# **iGENIX** TROUBLESHOOTING GUIDE

## **IG32982 – 2 Sandwich Toaster**



Problem	Possible Cause	Solution
The sandwich toaster does not work.	<ol style="list-style-type: none"><li>1. Not properly plugged into the mains wall socket.</li><li>2. No electricity in the mains wall socket.</li></ol>	<ol style="list-style-type: none"><li>1. Plug in firmly.</li><li>2. Check fuse or breaker.</li></ol>
The sandwich toaster smokes when it is used.	<ol style="list-style-type: none"><li>1. The protective film is burning off the elements.</li></ol>	<ol style="list-style-type: none"><li>1. This is perfectly normal and will stop with use.</li></ol>
The sandwich toaster lid wont close.	<ol style="list-style-type: none"><li>1. The bread and filling are too thick.</li></ol>	<ol style="list-style-type: none"><li>1. Remove and or adjust your filling and bread type.</li></ol>